


STORAGE REEL BRAKE TORQUE INFORMATION

When delivered Brake nuts are not torqued to specification,

It is the sole responsibility of the shipyard to torque the brake nuts down to proper holding force. Contact an engineer or licensed naval architect for recommended brake force for your specific application as every marine platform has different characteristics. To pay

out cable or rotate without hydraulics drive attached, loosen the brake nuts slightly until the drum rotates, paying attention not to over loosen the nuts as the drum could free spool in a dangerous fashion.

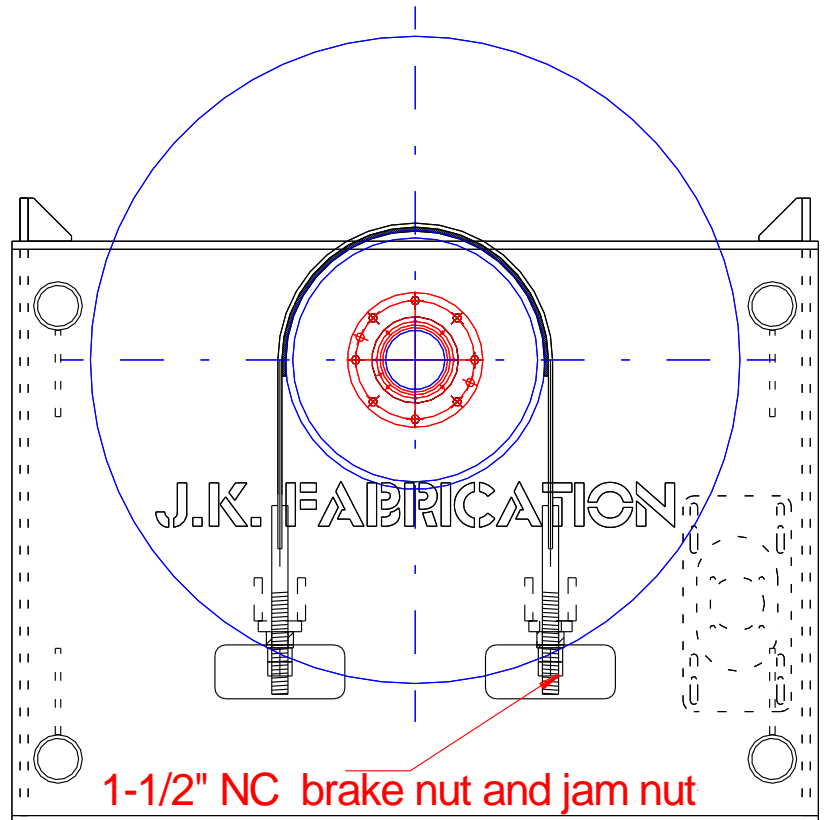

Nut Torque FT LBS	Brake Force Applied FT LBS
75	3,488
125	5,814
175	8,139
200	9,302
250	11,628